





Learning mode

This feature is mainly supplied to the solution when the sensor is missing. Because the monitor can only identify the same id group of sensors, other sensors can not be read, then just order a new sensor and re-learning the new sensor.

1. Install the sensor onto the tire first.
2. Press Mute button for 10 seconds, the system will enter “learning mode” and show you “LEN” in main screen.

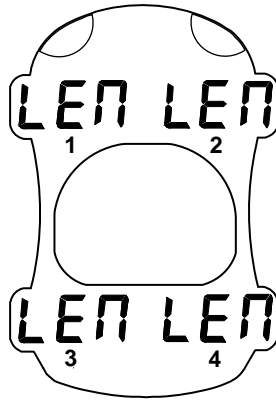

3. It is must to inflate the tire pressure under manufacture suggested safety pressure range first, then beep sound will be heard. Also, the new tire condition data will transmit to the monitor around 1 minute.

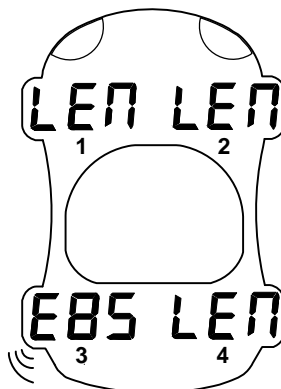

Take 3 for example